


OPERATING & ASSEMBLY INSTRUCTIONS

ALR1-H - Rail Wireless Charger

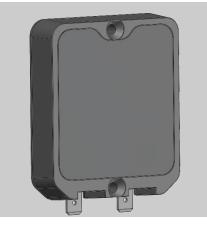

- SAFETY
- The device must not be exposed to severe mechanical shocks
- The device must not be exposed to extreme temperature, direct sunlight or The device may only be used within a dry environment, such as a vehicle.
- Do not install this device on hot vehicle parts
- The wiring harness should be protected by fusesObserve the magnitude and polarity of the input voltage when installing,
- Observe the magnitude and polarity of the input could damage the circuit isolate the circuit of the input could damage the circuit
 Isolate the circuit before you connect or remove the device
 Never open the device casing and never repair it. The device must be replaced if it is damaged
- Never place metal objects between charger and phone

Each wireless charger must be fused individually: 12/24V input voltage = 2A fuse

CONTENTS

PACKING CONTENTS ALR1-H

- 1 x ALR1-H Wireless charger
- 2 x Screws
- 2 x Crimp Connectors


- FEATURES
 12V & 24V systems compatible (9-32Vdc)
- Qi charging protocol
 Supplied with FASTON crimp connectors


ASSEMBLY


- 1.
- Crimp cables on to blade terminals and plug onto unit Using screws provided secure the device in desired location. (No.6 $\times\,25$ 2. provided)
- 3. Ensure there is no more than 5mm of material in front of the unit. A distance of greater than 7mm from the front of the unit will stop the unit 3. from detecting a phone.
- Connect to compatible power source (9V-32V, fused at 2A) and ensure 4. blue light is on to check unit is working

OPERATING INSTRUCTIONS

When connected to power, the unit will display a constant blue light. To charge a device, place it centrally on top of the Alfacharge unit.

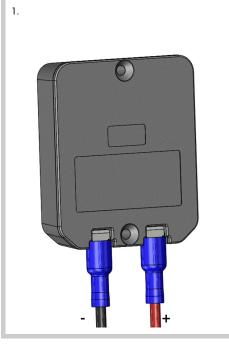

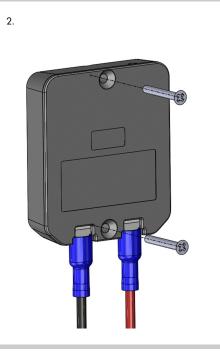

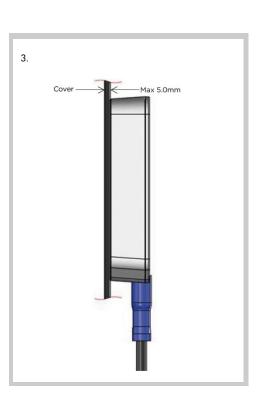

INI	FOR) A A A	TIC	NN
				ЛЛ

TECHNICAL DATA

Part Number	Power	Input Voltage	Output Voltage	Dimensions	Weight
ALR1-H	5W	9-32Vdc	Qi wireless	56x72x15mm	84g



